

# USB-201-OEM

Analog and Digital I/O

## User's Guide

Your new Measurement Computing product comes with a fantastic extra —

## Management committed to your satisfaction!

Thank you for choosing a Measurement Computing product—and congratulations! You own the finest, and you can now enjoy the protection of the most comprehensive warranties and unmatched phone tech support. It's the embodiment of our mission:

*To provide data acquisition hardware and software that will save time and save money.*

Simple installations minimize the time between setting up your system and actually making measurements. We offer quick and simple access to outstanding live FREE technical support to help integrate MCC products into a DAQ system.

**Limited Lifetime Warranty:** Most MCC products are covered by a limited lifetime warranty against defects in materials or workmanship for the life of the product, to the original purchaser, unless otherwise noted. Any products found to be defective in material or workmanship will be repaired, replaced with same or similar device, or refunded at MCC's discretion. For specific information, please refer to the terms and conditions of sale.

**Harsh Environment Program:** Any Measurement Computing product that is damaged due to misuse, or any reason, may be eligible for replacement with the same or similar device for 50% of the current list price. I/O boards face some harsh environments, some harsher than the boards are designed to withstand. Contact MCC to determine your product's eligibility for this program.

**30 Day Money-Back Guarantee:** Any Measurement Computing Corporation product may be returned within 30 days of purchase for a full refund of the price paid for the product being returned. If you are not satisfied, or chose the wrong product by mistake, you do not have to keep it.

*These warranties are in lieu of all other warranties, expressed or implied, including any implied warranty of merchantability or fitness for a particular application. The remedies provided herein are the buyer's sole and exclusive remedies. Neither Measurement Computing Corporation, nor its employees shall be liable for any direct or indirect, special, incidental or consequential damage arising from the use of its products, even if Measurement Computing Corporation has been notified in advance of the possibility of such damages.*

### Trademark and Copyright Information

Measurement Computing Corporation, InstaCal, Universal Library, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation. Refer to the Copyrights & Trademarks section on [mccdaq.com/legal](http://mccdaq.com/legal) for more information about Measurement Computing trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies.

© 2014 Measurement Computing Corporation. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

### Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems that, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

---

# Table of Contents

## Preface

<b>About this User's Guide .....</b>	<b>5</b>
What you will learn from this user's guide .....	5
Conventions in this user's guide .....	5
Where to find more information .....	5

## Chapter 1

<b>Introducing the USB-201-OEM.....</b>	<b>6</b>
Functional block diagram .....	6

## Chapter 2

<b>Installing the USB-201-OEM.....</b>	<b>7</b>
Unpacking.....	7
Installing the software .....	7
Installing the hardware .....	7
Installing on a Windows platform.....	7
Installing on an Android platform.....	7
Calibrating the hardware.....	7

## Chapter 3

<b>Functional Details .....</b>	<b>8</b>
Analog input acquisition modes .....	8
Software paced mode.....	8
Hardware paced mode.....	8
Board components .....	9
Connector W1 .....	9
Connector W3 .....	10
Screw terminal connectors.....	10
USB connector.....	10
LED indicators.....	10
Signal connections.....	10
Analog input .....	10
External pacer I/O.....	10
Digital I/O.....	11
Trigger input .....	11
Counter input .....	11
Voltage output .....	11
Ground.....	11
Mechanical drawing .....	12

## Chapter 4

<b>Specifications.....</b>	<b>13</b>
Analog input .....	13
Accuracy.....	13
Analog input DC voltage measurement accuracy .....	13
Noise performance.....	14
Analog input calibration .....	14
Digital input/output.....	14
External digital trigger.....	15
External pacer input/output.....	15
Counter .....	16
Memory .....	16
Power.....	16

USB specifications .....	17
Environmental .....	17
Mechanical .....	17
Header connectors .....	17
Screw terminal connector (not populated).....	18

---

## About this User's Guide

### What you will learn from this user's guide

This user's guide describes the Measurement Computing USB-201-OEM data acquisition device and lists device specifications.

### Conventions in this user's guide

**For more information**

Text presented in a box signifies additional information related to the subject matter.

**Caution!** Shaded caution statements present information to help you avoid injuring yourself and others, damaging your hardware, or losing your data.

**bold text**      **Bold** text is used for the names of objects on a screen, such as buttons, text boxes, and check boxes.

*italic text*      *Italic* text is used for the names of manuals and help topic titles, and to emphasize a word or phrase.

### Where to find more information

Additional information about USB-201-OEM hardware is available on our website at [www.mccdaq.com](http://www.mccdaq.com). You can also contact Measurement Computing Corporation with specific questions.

- Knowledgebase: [kb.mccdaq.com](http://kb.mccdaq.com)
- Tech support form: [www.mccdaq.com/support/support\\_form.aspx](http://www.mccdaq.com/support/support_form.aspx)
- Email: [techsupport@mccdaq.com](mailto:techsupport@mccdaq.com)
- Phone: 508-946-5100 and follow the instructions for reaching Tech Support
- 

For international customers, contact your local distributor. Refer to the International Distributors section on our website at [www.mccdaq.com/International](http://www.mccdaq.com/International).

## Introducing the USB-201-OEM

The USB-201-OEM is a USB 2.0 full-speed device that provides the following features:

- Eight single-ended 12-bit analog inputs
- 100 kS/s max sample rate
- Eight individually configurable digital I/O channels
- 32-bit counter input
- Digital trigger input
- External pacer clock input
- External pacer clock output
- User voltage output
- Two header connectors for field wiring connections

The USB-201-OEM device is compatible with both USB 1.1 and USB 2.0 ports. The speed of the device may be limited when using a USB 1.1 port due to the difference in transfer rates on the USB 1.1 versions of the protocol (low-speed and full-speed).

The USB-201-OEM is powered by the +5 V USB supply from your computer; no external power is required.

**Caution!** There are no product safety, electromagnetic compatibility (EMC), or CE marking compliance claims made for the USB-201-OEM. The USB-201-OEM is intended for use as a component of a larger system. MCC can help developers meet their compliance requirements. The end product supplier, however, is responsible for conforming to any and all compliance requirements.

### Functional block diagram

Device functions are illustrated in the block diagram shown here.

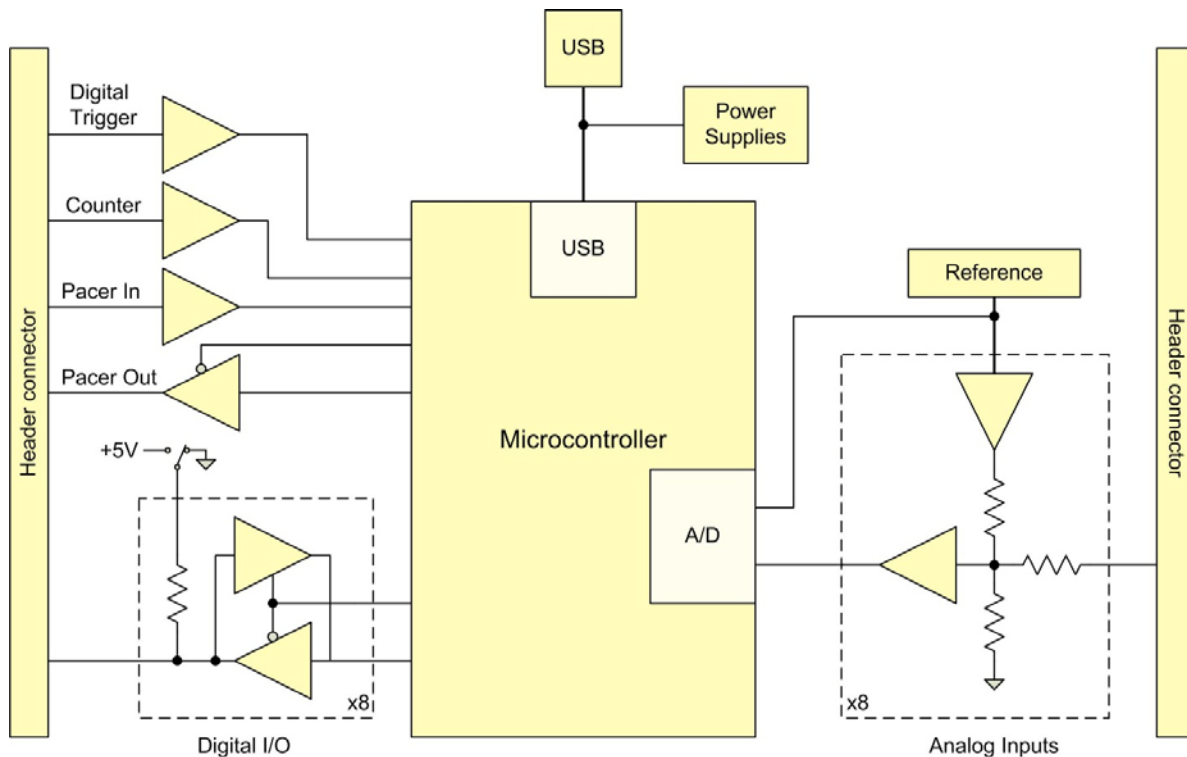


Figure 1. USB-201-OEM functional block diagram

---

# Installing the USB-201-OEM

## Unpacking

As with any electronic device, you should take care while handling to avoid damage from static electricity. Before removing the board from its packaging, ground yourself using a wrist strap or by simply touching the computer chassis or other grounded object to eliminate any stored static charge.

## Installing the software

Refer to the USB-201-OEM product page on the Measurement Computing website for information about how to install the supported software.

### **Install the software before you install the hardware**

The driver needed to run the device is installed when you install the software. Therefore, you need to install the software package you plan to use before you install the hardware.

## Installing the hardware

### Installing on a Windows platform

#### **Install the software before you install your device**

A driver needed to run the USB-201-OEM is installed when you install the software. Therefore, you need to install the software package you plan to use before you install the hardware.

For operation on a Windows operating system, we recommend that you run Windows Update to update your operating system with the latest USB drivers.

To connect the USB-201-OEM to your system, turn on your computer and connect the USB cable to an available USB port on the computer or to an external USB hub connected to the computer. Connect the other end of the USB cable to the USB connector on the device. No external power is required.

When you connect the device for the first time to a computer running Windows, a **Found New Hardware** dialog opens when the operating system detects the device. The dialog closes after the device is installed.

A green **Status** LED indicates the device status. When the LED is on, the device is powered and ready for operation. When the LED is off, the device is not powered or did not initialize. Figure 2 on page 9 shows the location of the **Status** LED.

### Installing on an Android platform

Many Android devices include a standard A-type USB port to connect to the USB-201-OEM. If your device does not have a USB port, you may need a USB OTG cable in order for your Android device to host a USB device. Refer to your Android device documentation for more information.

## Calibrating the hardware

The Measurement Computing Manufacturing Test department performs the initial factory calibration. Return the device to Measurement Computing Corporation when calibration is required. The recommended calibration interval is one year.

Field calibration is not supported.

---

## Functional Details

### Analog input acquisition modes

The USB-201-OEM can acquire analog input data in two different modes – software paced and hardware paced.

#### Software paced mode

You can acquire one analog sample at a time in software paced mode. You initiate the A/D conversion with a software command. The analog value is converted to digital and returned to the computer. You can repeat this procedure until you have the total number of samples that you want.

The maximum throughput sample rate in software paced mode is system-dependent.

#### Hardware paced mode

You can acquire data from up to eight channels in hardware paced mode. The analog data is continuously acquired and converted to digital values until you stop the scan. Data is transferred in blocks of 32 samples from the device to the memory buffer on your computer.

The maximum continuous scan rate is an aggregate rate. The total acquisition rate for all channels cannot exceed 100 kS/s. The following table lists the scan rate when scanning from one to eight channels.


Maximum continuous scan rate

# channels scanned	Scan rate (kS/s)
1	100
2	50
3	33.33
4	25
5	20
6	16.67
7	14.29
8	12.50

You can start a hardware paced continuous scan with either a software command or with an external hardware trigger event.

## Board components

Board components are shown in Figure 2. Note that each screw terminal location is unpopulated.

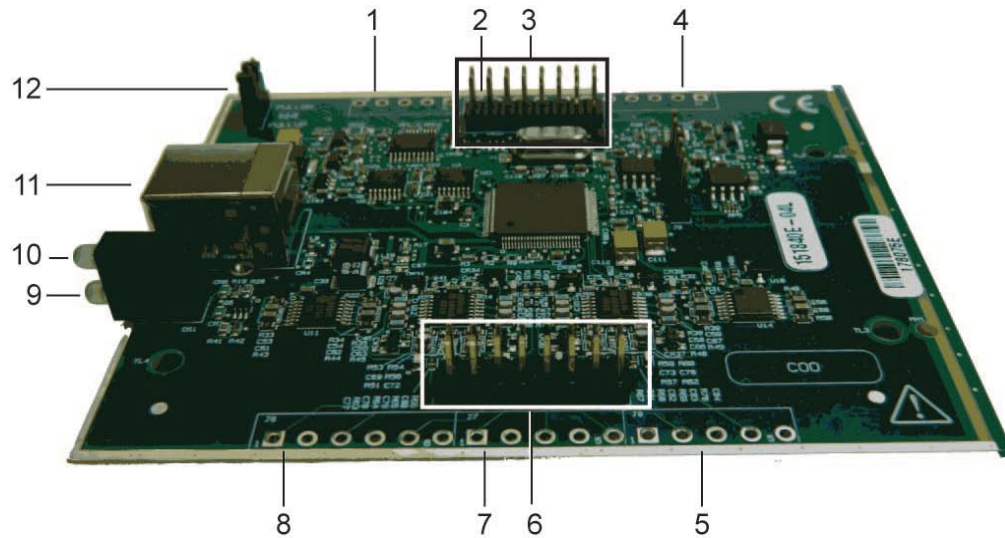

- |   |                     |   |                     |    |                     |
|---|---------------------|---|---------------------|----|---------------------|
| 1 | Screw terminal J1   | 5 | Screw terminal J8   | 9  | Activity LED        |
| 2 | Screw terminal J2   | 6 | Header connector W3 | 10 | Status LED          |
| 3 | Header connector W1 | 7 | Screw terminal J7   | 11 | USB connector       |
| 4 | Screw terminal J3   | 8 | Screw terminal J6   | 12 | Pull-up/down jumper |

Figure 2. Board components

## Connector W1

Header connector W1 provides connections for the DIO, external clock I/O, trigger, counter, power output, and digital ground reference.

W1 pin descriptions

Pin	Signal name	Pin description	Pin	Signal name	Pin description
1	DIO0	DIO channel 0	2	DIO1	DIO channel 1
3	DIO2	DIO channel 2	4	DIO3	DIO channel 3
5	DIO4	DIO channel 4	6	DIO5	DIO channel 5
7	DIO6	DIO channel 6	8	DIO7	DIO channel 7
9	GND	Digital ground	10	+VO	User voltage output
11	GND	Digital ground	12	AICKO	External clock pacer output
13	AICKI	External clock pacer input	14	CTR	Counter input
15	TRIG	Digital trigger input	16	GND	Digital ground

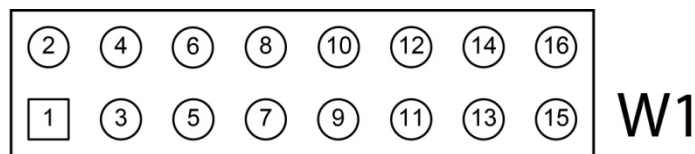


Figure 3. Connector W1 pinout

## Connector W3

Header connector W3 provides connections for the analog inputs and the analog ground reference.

W3 pin descriptions

Pin	Signal name	Pin description	Pin	Signal name	Pin description
1	CH0	Channel 0	2	AGND	Analog ground
3	CH1	Channel 1	4	AGND	Analog ground
5	CH2	Channel 2	6	AGND	Analog ground
7	CH3	Channel 3	8	AGND	Analog ground
9	CH4	Channel 4	10	AGND	Analog ground
11	CH5	Channel 5	12	AGND	Analog ground
13	CH6	Channel 6	14	AGND	Analog ground
15	CH7	Channel 7	16	AGND	Analog ground

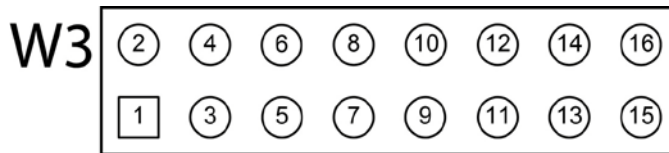


Figure 4. Connector W3 pinout

## Screw terminal connectors

Screw terminals J1 through J8 are unpopulated. When populated the screw terminals provide alternative connections to the header connectors. Refer to the Specifications chapter for screw terminal pinouts.

## USB connector

The USB connector provides +5 V power and communication. No external power supply is required.

## LED indicators

The device has two LED indicators – **Status** and **Activity**.

- The **Status** LED turns on when the device is detected and installed on the computer.
- The **Activity** LED blinks when data is transferred, and is off otherwise.

Refer to Figure 2 on page 9 for the location of these LEDs.

## Signal connections

### Analog input

You can connect up to 8 single-ended inputs to screw terminals **CH0** to **CH7**. The input voltage range is  $\pm 10$  V. Single-ended mode requires two wires; connect one wire to the signal you want to measure (**CHx**), and connect a second wire to the analog ground reference (**AGND**).

### External pacer I/O

The USB-201-OEM provides one external clock input (**AICKI**) and one clock output (**AICKO**) for the analog input pacer. You can connect an external clock signal to **AICKI**.

When using the internal clock, **AICKO** outputs the ADC sample clock.

## Digital I/O

You can connect up to eight digital I/O lines to **DIO0** through **DIO7**. The digital I/O terminals can detect the state of any TTL-level input. Refer to the schematic shown in Figure 5.

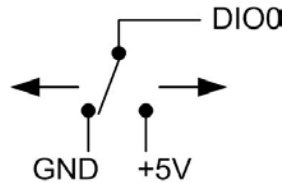


Figure 5. Schematic showing switch detection by digital channel DIO0

If you set the switch to the +5 V input, DIO0 reads *TRUE* (1). If you move the switch to GND, DIO0 reads *FALSE* (0).

### Internal pull-up/down configuration

The digital port has 47 k $\Omega$  resistors that you can configure as pull-up or pull-down with an internal jumper. Unconnected inputs are pulled low by default to 0 V through 47 k $\Omega$  resistors. The pull-up/pull-down voltage is common to all 47 k $\Omega$  resistors. You can change the configuration with an internal jumper; see Figure 2 on page 9 for the location this jumper.

**Caution!** The discharge of static electricity can damage some electronic components. Before handling the board, either ground yourself using a wrist strap or touch the computer chassis or other grounded object to eliminate any stored static charge.

Figure 6 shows the jumper configured for pull-down.

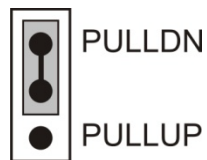


Figure 6. Pull-down jumper

Configure the jumper for pull-up to pull the digital inputs high (+5V).

## Trigger input

The **TRIG** terminal is an external digital trigger input. The trigger mode is software-selectable for edge- or level-sensitive.

## Counter input

The **CTR** terminal is a 32-bit event counter that can accept frequency inputs up to 1 MHz. The internal counter increments when the TTL levels transition from low to high.

## Voltage output

The user voltage output (**+VO**) terminal can output up to 100 mA maximum at approximately +5V. You can use this terminal to supply power to external devices or circuitry.

**Caution!** The **+VO** terminal is an output. Do not connect to an external power supply or you may damage the device and possibly the computer.

## Ground

The analog ground (**AGND**) terminals provide a common ground for all analog channels. The digital ground (**GND**) terminals provide a common ground for the digital, counter, pacer I/O, and power terminal.

**For more information about signal connections**

For more information about analog and digital signal connections, refer to the *Guide to DAQ Signal Connections* at [www.mccdaq.com/pdfs/DAQ-Signal-Connections.pdf](http://www.mccdaq.com/pdfs/DAQ-Signal-Connections.pdf).

**Mechanical drawing**

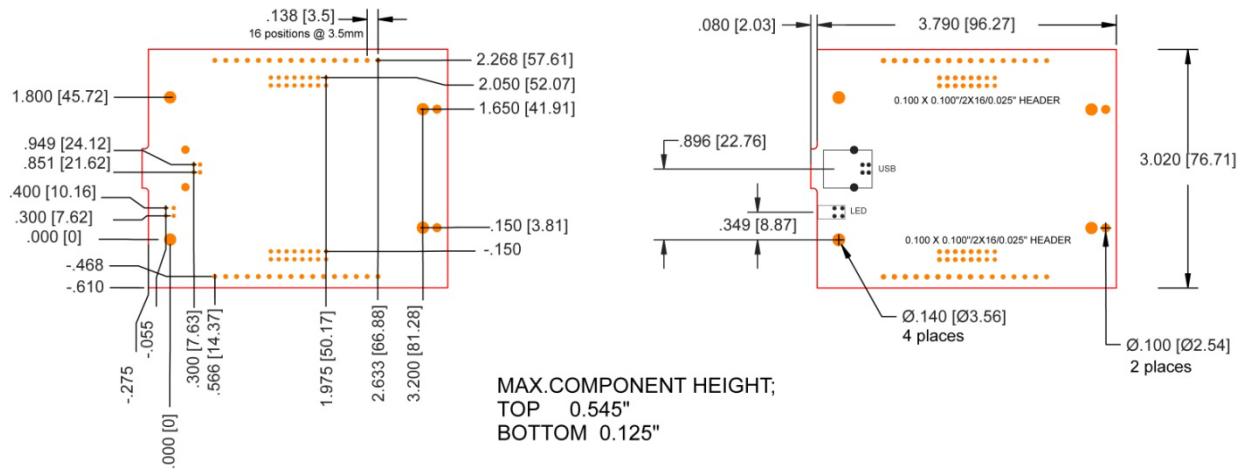


Figure 7. Circuit board dimensions

## Specifications

All specifications are subject to change without notice.

Typical for 25 °C unless otherwise specified.

Specifications in *italic text* are guaranteed by design.

### Analog input

Table 1. General analog input specifications

Parameter	Conditions	Specification
A/D converter type		Successive approximation
ADC resolution		12 bits
Number of channels		8 single-ended
Input voltage range		$\pm 10$ V
<i>Absolute maximum input voltage</i>	<i>CHx relative to AGND</i>	<ul style="list-style-type: none"> <li>■ <math>\pm 25</math> V max (power on)</li> <li>■ <math>\pm 25</math> V max (power off)</li> </ul>
<i>Input impedance</i>		<ul style="list-style-type: none"> <li>■ <math>1\text{ M}\Omega</math> (power on)</li> <li>■ <math>1\text{ M}\Omega</math> (power off)</li> </ul>
<i>Input bias current</i>	<i>10 V input</i>	$-12\ \mu\text{A}$
	<i>0 V input</i>	$2\ \mu\text{A}$
	<i>-10 V input</i>	$12\ \mu\text{A}$
Input bandwidth	Small signal ( $-3$ dB)	150 kHz
Maximum working voltage	Input range relative to AGND	$\pm 10.1$ V max
Crosstalk	Adjacent channels, DC to 10 kHz	$-75$ dB
Input coupling		DC
Sampling rate	Internal pacer	0.016 S/s to 100 kS/s, software-selectable
	External pacer	100 kS/s max
Sample clock source		<ul style="list-style-type: none"> <li>■ Internal A/D clock</li> <li>■ Pacer input terminal AICKI</li> </ul>
Channel queue		Up to eight unique, ascending channels
Throughput	Software paced	33 to 4000 S/s typ, system dependent
	Hardware paced	100 kS/s max, system dependent
Warm-up time		15 minutes min

### Accuracy

#### Analog input DC voltage measurement accuracy

Table 2. DC Accuracy components and specifications. All values are ( $\pm$ )

Range	Gain error (% of reading)	Offset error (mV)	Absolute accuracy at Full Scale (mV)	Gain temperature coefficient (% reading/ $^{\circ}\text{C}$ )	Offset temperature coefficient (mV/ $^{\circ}\text{C}$ )
$\pm 10\text{V}$	0.098	11	20.8	0.016	0.87

## Noise performance

For the peak to peak noise distribution test, the input channel is connected to AGND at the input terminal block, and 12,000 samples are acquired at the maximum throughput.

Table 3. Noise performance specifications

Range	Counts	LSBrms
±10 V	5	0.76

## Analog input calibration

Table 4. Analog input calibration specifications

Parameter	Specification
Recommended warm-up time	15 minutes min
Calibration method	Factory
Calibration interval	1 year

## Digital input/output

Table 5. Digital input specifications

Parameter	Specification
Digital type	TTL
Number of I/O	8
Configuration	Each bit may be configured as input (power on default) or output
Pull-up configuration	The port has 47 kΩ resistors that may be configured as pull-up or pull-down with an internal jumper. The factory configuration is pull-down.
Digital I/O transfer rate (system-paced)	33 to 4000 port reads/writes per second typical, system dependent
Input low voltage threshold	0.8 V max
Input high voltage threshold	2.0 V min
Input voltage limits	5.5 V absolute max -0.5 V absolute min 0 V recommended min
Output high voltage	4.4 V min (IOH = -50 μA) 3.76 V min (IOH = -24 mA)
Output low voltage	0.1 V max (IOL = 50 μA) 0.44 V max (IOL = 24 mA)
Output current	±24 mA max

## External digital trigger

Table 6. External digital trigger specifications

Parameter	Specification
Trigger source	TRIG input
Trigger mode	Software configurable for edge or level sensitive, rising or falling edge, high or low level. Power on default is edge sensitive, rising edge.
Trigger latency	1 $\mu$ s + 1 pacer clock cycle max
Trigger pulse width	125 ns min
Input type	Schmitt trigger, 47 k $\Omega$ pull-down to ground
Schmitt trigger hysteresis	1.01 V typ 0.6 V min 1.5 V max
Input high voltage threshold	2.43 V typ 1.9 V min 3.1 V max
Input low voltage threshold	1.42 V typ 1.0 V min 2.0 V max
Input voltage limits	5.5 V absolute max -0.5 V absolute min 0 V recommended min

## External pacer input/output

Table 7. External pacer I/O specifications

Parameter	Specification
Terminal names	AICKI, AICKO
Terminal types	AICKI: Input, active on rising edge AICKO: Output, power on default is 0 V, active on rising edge
Terminal descriptions	AICKI: Receives pacer clock from external source AICKO: Outputs internal pacer clock
Input clock rate	100 kHz max
Clock pulse width	AICKI: 400 ns min AICKO: 400 ns min
Input type	Schmitt trigger, 47 k $\Omega$ pull-down to ground
Schmitt trigger hysteresis	1.01 V typ 0.6 V min 1.5 V max
Input high voltage threshold	2.43 V typ 1.9 V min 3.1 V max
Input low voltage threshold	1.42 V typ 1.0 V min 2.0 V max
Input voltage limits	5.5 V absolute max -0.5 V absolute min 0 V recommended min
Output high voltage	4.4 V min (IOH = -50 $\mu$ A) 3.80 V min (IOH = -8 mA)
Output low voltage	0.1 V max (IOL = 50 $\mu$ A) 0.44 V max (IOL = 8 mA)
Output current	$\pm$ 8 mA max

## Counter

Table 8. CTR specifications

Parameter	Specification
Pin name	CTR
Number of channels	1 channel
Resolution	32-bit
Counter type	Event counter
Input type	Schmitt trigger, 47 k $\Omega$ pull-down to ground
Counter read/write rates (software paced)	33 to 4,000 reads/writes per second typ, system dependent
Schmitt trigger hysteresis	1.01 V typ 0.6 V min 1.5 V max
Input high voltage threshold	2.43 V typ 1.9 V min 3.1 V max
Input low voltage threshold	1.42 V typ 1.0 V min 2.0 V max
Input voltage limits	5.5 V absolute max -0.5 V absolute min 0 V recommended min
Input frequency	1 MHz max
High pulse width	25 ns min
Low pulse width	25 ns min

## Memory

Table 9. Memory specifications

Parameter	Specification
Data FIFO	12 K (12,288) analog input samples
Non-volatile memory	2 KB (768 B calibration storage, 256 B UL user data, 1 KB DAQFlex user data)

## Power

Table 10. Power specifications

Parameter	Conditions	Specification
Supply current	Typical (Note 1)	150 mA
	Maximum (including user voltage, DIO and AICKO loading)	500 mA
User voltage output terminal (+VO)		4.25 V min, 5.25 V max
User voltage output current		100 mA max

**Note 1:** This is the total quiescent current requirement for the device which includes up to 10 mA for the Status LED. This value does not include any potential loading of the digital I/O bits, AICKO, or user voltage.

## USB specifications

Table 11. USB specifications

Parameter	Specification
USB device type	USB 2.0 (full-speed)
Device compatibility	USB 1.1, USB 2.0
USB cable type	A-B cable, UL type AWM 2725 or equivalent. (minimum 24 AWG VBUS/GND, minimum 28 AWG D+/D-)
USB cable length	3 m (9.84 ft) max

## Environmental

Table 12. Environmental specifications

Parameter	Specification
Operating temperature range	0 °C to 55 °C max
Storage temperature range	-40 °C to 85 °C max
Humidity	0% to 90% non-condensing max

## Mechanical

Table 13. Mechanical specifications

Parameter	Specification
Dimensions (L × W × H)	98.30 × 76.71 × 14.61 mm (3.87 × 3.02 × 0.575 in.) max

## Header connectors

Table 14. Header connector specifications

Parameter	Specification
Connector type	Two 2 × 8 0.1 in. pitch headers, labeled W1 and W3

Table 15. W1 pinout

Pin	Signal name	Pin description	Pin	Signal name	Pin description
1	DIO0	DIO channel 0	2	DIO1	DIO channel 1
3	DIO2	DIO channel 2	4	DIO3	DIO channel 3
5	DIO4	DIO channel 4	6	DIO5	DIO channel 5
7	DIO6	DIO channel 6	8	DIO7	DIO channel 7
9	GND	Digital ground	10	+VO	User voltage output
11	GND	Digital ground	12	AICKO	External clock pacer output
13	AICKI	External clock pacer input	14	CTR	Counter input
15	TRIG	Digital trigger input	16	GND	Digital ground

Table 16. W3 pinout

Pin	Signal name	Pin description	Pin	Signal name	Pin description
1	CH0	Channel 0	2	AGND	Analog ground
3	CH1	Channel 1	4	AGND	Analog ground
5	CH2	Channel 2	6	AGND	Analog ground
7	CH3	Channel 3	8	AGND	Analog ground
9	CH4	Channel 4	10	AGND	Analog ground
11	CH5	Channel 5	12	AGND	Analog ground
13	CH6	Channel 6	14	AGND	Analog ground
15	CH7	Channel 7	16	AGND	Analog ground


## Screw terminal connector (not populated)

Table 17. Screw terminal connector specifications

Parameter	Specification
Connector type	3.51mm screw terminal footprints (not populated), labeled J1, J2, J3, J6, J7, J8

Table 18. Screw terminal pinout

J1			J6		
Pin	Signal name	Pin description	Pin	Signal name	Pin description
5	DIO0	DIO channel 0	1	CH0	Channel 0
4	DIO1	DIO channel 1	2	AGND	Analog ground
3	DIO2	DIO channel 2	3	CH1	Channel 1
2	DIO3	DIO channel 3	4	AGND	Analog ground
1	DIO4	DIO channel 4	5	CH2	Channel 2
			6	AGND	Analog ground
J2			J7		
Pin	Signal name	Pin description	Pin	Signal name	Pin description
5	DIO5	DIO channel 5	1	CH3	Channel 3
4	DIO6	DIO channel 6	2	AGND	Analog ground
3	DIO7	DIO channel 7	3	CH4	Channel 4
2	GND	Digital ground	4	AGND	Analog ground
1	+VO	User voltage output	5	CH5	Channel 5
J3			J8		
Pin	Signal name	Pin description	Pin	Signal name	Pin description
6	GND	Digital ground	1	AGND	Analog ground
5	AICKO	External clock pacer output	2	CH6	Channel 6
4	AICKI	External clock pacer input	3	AGND	Analog ground
3	CTR	Counter input	4	CH7	Channel 7
2	TRIG	Digital trigger input	5	AGND	Analog ground
1	GND	Digital ground			

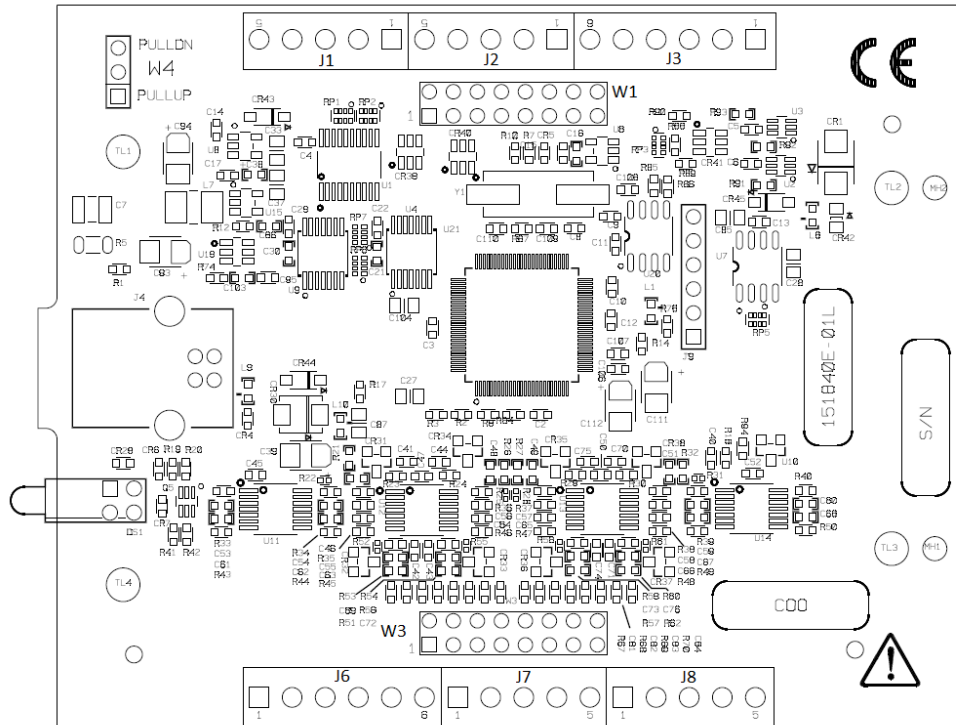

**Measurement Computing Corporation**  
**10 Commerce Way**  
**Suite 1008**  
**Norton, Massachusetts 02766**  
**(508) 946-5100**  
**Fax: (508) 946-9500**  
**E-mail: [info@mccdaq.com](mailto:info@mccdaq.com)**  
**[www.mccdaq.com](http://www.mccdaq.com)**